


# At a glance Intuvia

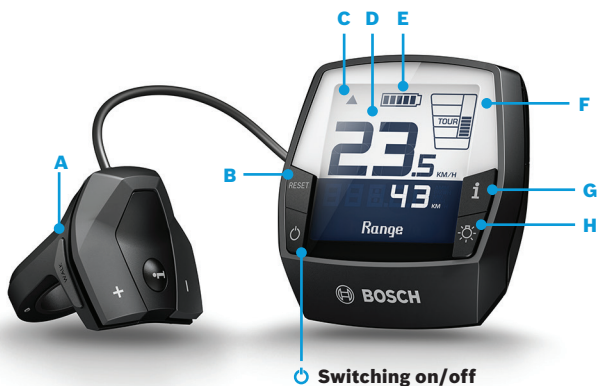

**BOSCH**  
Invented for life



Use **+** / **-** buttons to select one of four assisted riding modes.

- Eco** Efficient support for maximum range
- Tour** Consistent support for longer rides
- Tour+\*** Continuous support for energy-saving rides
- Sport** Powerful support for all types of riding
- eMTB\*\*** Dynamic support for a natural feel
- Turbo** Maximum support for challenging rides

## Functions

- A** Activate Walk Assist  
Press Walk assist and hold **+**
- B** Reset display options
- C** Shift recommendation
- D** Current speed
- E** Battery charge level
- F** Current riding mode
- G** Information button:  
toggle between the various display options (trip distance, trip time, average, range)
- H** Switch lights on/off

\*Contact your local dealer to find out whether your eBike can be updated with Tour+ mode. \*\*The eMTB mode replaces the Sport mode on eBikes with the Performance Line and the Performance Line CX drive units.

